

## DIONE 1024 CAM SERIES

Ultra-compact LWIR thermal imaging core

- SWaP optimized, uncooled and shutterless
- Microbolometer detector with 1024x768 pixel resolution and 12  $\mu\text{m}$  pixel pitch



### STATE-OF-THE-ART THERMAL IMAGING CORE

The Dione 1024 CAM series is based on the Dione 1024 OEM thermal imaging core with a 1024x768 pixel resolution and 12  $\mu\text{m}$  pitch. The detector NETD is less than 40 mK (available upon request) or 50 mK. The maximum frame rate is 80 Hz.

Dione 1024 CAM is a LWIR uncooled thermal imaging core with housing supporting M34/M45 lens (optional).

All Dione 1024 versions benefit from Xenics image enhancement for advanced image processing while keeping power consumption low. Moreover, GenICam compliance and availability of multiple lenses add flexibility for integration programs in the target markets like safety and security, transportation and industrial process monitoring.

### DESIGNED FOR USE IN


- Safety & Security
- Transportation
- Process Monitoring

### ADVANTAGES

- Ultra-compact size, low weight and power (SWaP)
- 1024x768 microbolometer detector with 12  $\mu\text{m}$  pixel pitch
- Frame rates up to 80 Hz
- Detector NETD is less than 40 mK (available upon request) or 50 mK



Border Security

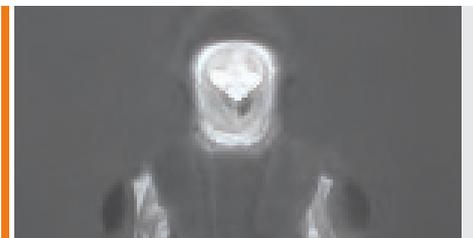

Thermal Security



Vision Enhancement

## SPECIFICATIONS

Camera Specifications	Dione 1024 CAM 40 mK	Dione 1024 CAM 50 mK
<b>Mechanical specifications</b>		
Camera dimensions (width x height x length) [mm] (approx.)	40x40x34*; 50x50x35*	
Optical interface (optional)	M34x0.5 or M45x0.75	
Camera weight [gr]	78*; 80*	
Connector general I/O	SAMTEC ST5-30-1.50-L-D-P-TR	
<b>Environmental &amp; power specifications</b>		
Operating temperature range (housing temperature) [°C]	From -40 to +70	
Storage temperature [°C]	From -40 to +85	
Power consumption [W]	~ 2.1 (at 60 Hz) ~ 1.9 (at 30 Hz)	
Power supply voltage	DC 5 V	
Shock	40 g, 11 ms, MIL-STD810G	
Vibration	5 g (20 to 2000 Hz), MIL-STD810G	
Regulatory compliance	RoHS	
<b>Electro-optical specifications</b>		
Image format [pixels]	1024x768	
Pixel pitch [µm]	12	
Detector type	Microbolometer	
Integration type	Rolling shutter	
Active area and diagonal [mm]	12.29 x 9.432 (diagonal 15.49)	
Detector NETD (Noise Equivalent Temperature Difference) [mK]	<40 (at 30Hz, 300K, F/1), available upon request	<50 (at 30Hz, 300K, F/1)
Spectral range [µm]	8-14	
Pixel operability	>99.5%	
Max frame rate [Hz] [full frame]	80	
Integration time range [µs]	20 - 65 recommended (1 - 100 is possible)	
Region of interest	No	
Min region size [pixels]	80 x 80	
Analog-to-Digital [ADC] [bits]	16	
Command and control	via SAMTEC ST5 connector	
Digital output format	16bit DV**, MIPI CSI-2**	
Trigger	via SAMTEC ST5 connector	
<b>Product selector guide</b>		
Part number	XEN-000796	XEN-000794

\* refers to specifications applicable for optical interfaces (optional)

\*\* refers to digital output formats/interfaces that are available as options

XDS036.02 | Information furnished by Xenics is believed to be reliable. However, no responsibility is assumed for possible inaccuracies or omissions. Specifications are typical values and subject to change without notice. This information supersedes all previously supplied information.



For more information on our products  
Please scan the QR code.

[www.xenics.com](http://www.xenics.com) | [www.sinfrared.com](http://www.sinfrared.com)